

ClocTeck Instruction Manual

1. Product introduction

Display: two display modes

Simple mode: Only the time and weather icons are visible; Full mode: Shows the date, week, time, temperature and humidity, weather, and so on.

Perpetual calendar: from 1970 to 2099. The default time is January 1, 2022

12/24 hours: 12/24 hours can be switched, and the default time is 24 hours.

Alarm three groups of independent alarms, each ringing for one minute, the sound is tick-tock.

Support temperature and humidity display, use high-precision sensor chip, and support Celsius/Fahrenheit switching.

Built-in large-capacity lithium battery, 75 days long battery life

2. Product content:

A clock body.

One USB cable

3. Caution:

This product's screen is made of glass, so be careful not to drop it and cause product damage; a damaged screen cannot be guaranteed.

The screen and touch panel have a removable film.

When the machine crashes due to improper operation, use a toothpick to press the reset button in the reset hole to restore factory settings. (The reset hole is located on the base's backside.)

4. Function description:

Time and alarm clock SETTING (set):

Short press the SET key to enter the alarm clock setting, and the setting sequence is as follows: An hour-minute-switch (on) means to turn on the alarm clock,

-denotes turning off the alarm clock. A1 A2 A3 represent the current set of alarm clocks.

The set item will blink, so press the + key to make changes.

After you've SET all of the items or settings, press and hold the set key to exit and save the changes.

To enter the time setting, long press the SET key, and the setting sequence is as follows:

Year-Month-Day-Hour-Minute-Degree-Day (Fahrenheit/Celsius)

The set item will blink, so press the + key to make changes.

After you've SET all of the items or settings, press and hold the set key to exit and save the changes.

Display mode setting: In normal mode, press and hold-key to switch between thin mode and detailed mode.

12/24 time display setting: in normal mode, short press the key to switch the display mode from 12 to 24.

Turn on/off alarm function: short press the+key to turn on/off all alarms.

When the ALARM in the lower right corner of the time lights up in the detailed mode, it means that the alarm is activated (the required alarm must be set in the alarm settings).